Citrus Juicer 1.2 Litres
SY-EX12

INTRODUCTION

Thank you for having purchased the SY-EX12. To fully benefit from the SY-EX12 please read this user manual carefully. We hope that you enjoy your new SY-EX12

GENERAL DESCRIPTION

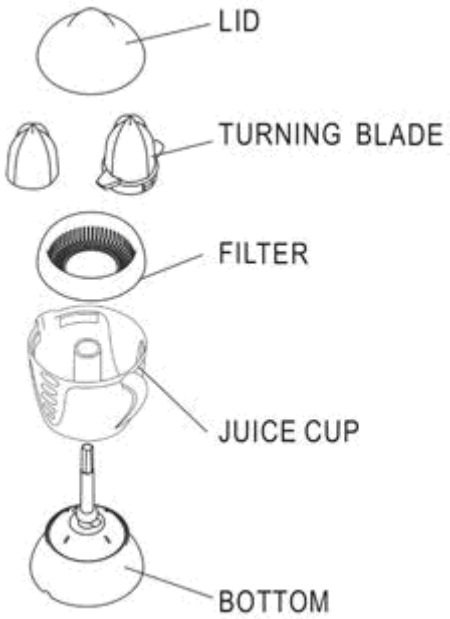

NOTE: The SY-EX12 includes 2 reamers of different sizes. When using large size fruits, make sure the large reamer is put on, and when using small size fruits, remove the large reamer. (See picture below)

IMPORTANT

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Do not immerse the motor unit in water nor rinse it under the tap.

Warning

- Check if the voltage indicated on the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- If the mains cord is damaged, you must have it replaced by Sytech Service Centre in order to avoid a hazard
- Do not use the appliance if the plug, the mains cord or any other parts are damaged.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always keep the SY-EX12 unplugged when not in use.

Caution

- Always place the appliance on a flat, stable surface
- Do not use the citrus press longer than 1 minute without interruption
- This appliance is only meant for soft fruits, such as oranges or lemons.
- This appliance is intended for household use only.
- Never use any accessories or parts from other manufacturers or that Sytech doesn't recommend. If you do use such parts that are not recommended by Sytech, the guarantee becomes void/invalid.

Preparing for use

1. Clean all detachable parts before you use the appliance for the first time.
2. Make sure the appliance is assembled properly before you put the plug in the wall socket.
3. Remove the dust cover from the appliance.
4. Wind the excess cord around the base of the appliance.
5. Put the plug in the wall socket.

USING THE SY-EX12

1. Press the halved fruit firmly onto the cone to switch on the appliance.
2. Remove the cone and the sieve. Then lift the jug from the motor unit (base)
3. Pour the fresh juice into a glass.

TIP: Sytech recommends cleaning the appliance immediately after use as dried fruit pulp is more difficult to remove. (See under "Cleaning")

Cleaning

1. Always make sure that the appliance is unplugged before cleaning.
2. Remove all detachable parts from the motor unit.
3. Separate the sieve and the cone.
4. Clean all the detachable parts with hot water and some washing-up liquid or otherwise, they can even be washed in the dishwasher.
5. Clean the motor unit with a moist cloth.

NOTE: Never immerse the motor unit in water nor rinse it under the tap.

Storage

1. Wind the cord round the base of the appliance

2. Store the appliance in a safe and dry place.

SPECIFICATIONS

Operating voltage: 230V~ 50Hz
Capacity: 1.2 L
Power: 40W
KB: 5 minutes

ENVIRONMENTAL DISPOSAL

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre